


## Synchro cable adjust (ref 78-31-04 page 401ff)

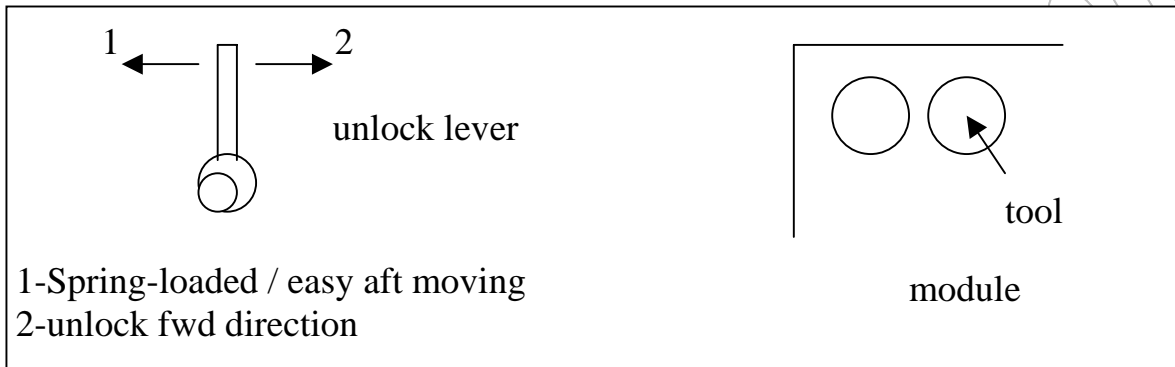

Secure flap system

Open fancowls

Open panels on reverser-halves

Pump off

Reverse select

Install tool (p/n: B78009-2) on module

Release locking actuator (handle p/n: 315A1857-4)

Open applicable synclock CB(s)

Remove tank pressure

Open LH reverser-half (little) to gain access to the lines

Open tubes on centre nonlocking actuator

Remove line supports

Remove cables and check condition (cable p/n: 315A1804-1)

Close applicable synclock CB(s)

Pump on

Install cables

Close tubes

Pump off

Deselect reverse

Install line supports

Remove tool

Provide tank pressure

Close and latch LH reverser-half

Cycle 3 times reverse (reset box in the first cycle)

Pump off

Check gap actuators (locking 0,18-0.8 / nonlocking 0-2 mm)

Close panels, restore aircraft to normal condition.

UNCONTROLLED DATA