

AC Transfer Bus 1, C phase	P6-4 C15	Anti-ice, Drain Mast Heater, Air	P18-3 E4	Cargo Light Cont	P92 C102	Pedestal		FSEU DC 1	P6-2 A8
AC Transfer Bus 2, A phase	P6-4 C10	Anti-ice, Drain Mast Heater, Grd	P18-3 E3	Cargo Loader Cont, Aft	P6-11 D8	Eng 1, Alt Pwr, Channel B	P18-2 A4	FSEU DC 2	P6-2 A9
AC Transfer Bus 2, B phase	P6-4 C11	Anti-ice, Elevator Pitot, Left	P18-3 C4	Cargo Loader Cont, Fwd	P6-12 D8	Eng 1, Alt Pwr, Channel A	P18-2 A5	Fuel Boost Pump, Center Tank Lt	P91 D6
ACARS MU AC	P6-1 E7	Anti-ice, Elevator Pitot, Right	P18-3 D4	Cargo Loader Drive, Aft	P91 E8	Eng 2, Alt Pwr, Channel B	P6-2 D7	Fuel Boost Pump, Center Tank Rt	P92 D6
ACARS CMU AC	P6-1 E8	Anti-ice, Eng 1, Cowl Anti-ice Valve	P18-3 A7	Cargo Loader Drive, Fwd	P92 D10/E4	Eng 2, Alt Pwr, Channel A	P6-2 D8	Fuel Boost Pump, Tank 1, Aft	P92 D2
ACARS CMU DC	P6-1 E9	Anti-ice, Eng 1, Engine & Wing Cont	P18-3 A6	CDU 1	P18-2 A7	Eng 1, Engine & Wing Control	P18-3 A6	Fuel Boost Pump, Tank 1, Fwd	P91 D2
ACMS	P6-1 E4	Anti-ice, Eng 2, Cowl Anti-ice Valve	P18-3 B7	CDU 2	P6-1 D15	Eng 2, Engine Control	P18-3 B3	Fuel Boost Pump, Tank 2, Aft	P91 D4
ADF 1	P18-1 A4	Anti-ice, Eng 2, Control	P18-3 B6	Clock, Misc	P6-3 A2	Eng 1, Ignition, Left	P18-2 A3	Fuel Boost Pump, Tank 2, Fwd	P92 D4
ADF 2	P6-1 A17	Anti-ice, F/O Pitot	P18-3 D5	Clock, Display	P6-3 A1	Eng 1, Ignition, Right	P18-2 A1	Fuel Cont	P6-3 A3
ADIRU, Left, DC	P18-1 E5	Anti-ice, Hose Heaters	P18-3 F16	CMU, ACARS, DC	P6-1 E9	Eng 2, Ignition, Left	P6-2 D6	Fuel Cross Feed Valve	P6-3 B7
ADIRU, Left, AC	P18-1 E7	Anti-ice, Master Caution	P6-3 D9	CMU-1 AC	P6-1 E8	Eng 2, Ignition, Right	P6-2 D4	Fuel, Eng 1, HPSOV Cont	P6-3 E5
ADIRU, Right, AC	P6-1 C14	Anti-ice, Temp Probe (Rosemount)	P18-3 C2	CMU-2 AC	P6-1 E7	Eng 1, Run/Pwr	P18-2 B3	Fuel, Eng 1, HPSOV Ind	P6-3 E6
ADIRU, Left, EXC	P18-2 E8	Anti-ice, Windshield Wiper, Left	P18-3 B3	Coffee Maker 1 & 2, Aft Galley	P18-2 E11	Eng 2, Run/Pwr	P6-2 B5	Fuel, Eng 2, HPSOV Cont	P6-3 E3
ADIRU, Right, EXC	P6-1 C15	Anti-ice, Windshield Wiper, Right	P18-3 B1	Coffee Maker, Forward Galley	P18-2 E11	Eng 1, Start Lever, Channel A	P18-2 B1	Fuel, Eng 2, HPSOV Ind	P6-3 E4
ADIRU, Right DC	P6-1 C17	Anti-ice, Wing Anti-ice Valve	P18-3 A1	Communications, HF1	P6-1 D2	Eng 1, Start Lever, Channel B	P18-2 B2	Fuel Ind	P6-3 A4
AFCS, Sys A, FCC (DC)	P18-1 D2	Anti-skid, Inboard	P6-3 E16	Communications, HF2	P18-2 D11	Eng 2, Start Lever, Channel A	P6-2 B6	Fuel Qty 1	P6-3 A6
AFCS, Sys A, Engage Interlock	P18-1 D3	Anti-skid, Outboard	P6-3 E18	Communications, VHF 1	P6-1 C3	Eng 2, Start Lever, Channel B	P6-2 B7	Fuel Qty 2	P6-3 A5
AFCS, Sys A, Mach Trim (AC)	P18-1 C4	APU AC Gen Ind	P91 B11	Communications, VHF 2	P18-2 D12	Eng 1, Start Valve	P18-2 B8	Fuel Shutoff Valve, Bus	P6-3 C6
AFCS, Sys A, Mach Trim (DC)	P18-1 D4	APU Control	P6-4 A14	Communications, VHF 3	P6-1 B12	Eng 2, Start Valve	P6-2 C4	Fuel Shutoff Valve, Pwr Pack	P6-3 C4
AFCS, Sys A, Sensor Exc (AC)	P18-1 D5	APU Fan Power	P6-4 B14	Compass 1, Alternate Transformer	P18-2 B3	Eng Fuel, Eng 2, HPSOV Cont	P6-3 E3	Fuel Spar Valve, Eng 1	P6-3 B4
AFCS, Sys A, Warn Light (Bat)	P18-1 C1	APU Fire Detection	P6-2 A23	Compass 2, Alternate Transformer	P18-2 A9	Eng Fuel, Eng 1, HPSOV Ind	P6-3 E4	Fuel Spar Valve, Eng 2	P6-3 B3
AFCS, Sys B, FCC (DC)	P6-2 B3	APU Fire Extinguisher Bottle	P6-2 C23	Computer, Air Data 1 (26V AC)	P18-2 A8	Eng Fuel, Eng 1, HPSOV Ind	P6-3 E5	Fuel Spar Valve Ind	P6-3 B5
AFCS, Sys B, Engage Interlock	P6-2 B4	APU Fire Switch Power	P6-2 B19	Computer, Air Data 2 (26V AC)	P6-1 B6	Eng Pump Depress Valve 1	P6-2 B15	Fuel Temp Ind	P6-3 A7
AFCS, Sys B, Mach Trim (AC)	P6-2 C1	APU Gen Control Unit	P6-4 F12	Computer, Air Data 2 (AC)	P18-2 E8	Eng Pump Depress Valve 2	P6-2 B	Galley Bus A	P92 F7
AFCS, Sys B, Mach Trim (DC)	P6-2 B2	APU Gen Control Unit	P92 C9	Computer, FMCS	P18-3 A7	Engine Vibration Monitor	P6-2 A2	Galley Bus C	P91 F7
AFCS, Sys B, Sensor Exc (AC)	P6-2 C2	APU Start	P18-5	Cowl Anti-ice Valve, Engine 1	P18-3 B7	Entertainment, Aud, LH	P6-1 C7	Galley Bus D	P91 F6
AFCS, Sys B, Warn Light (Bat)	P6-2 B1	APU Start Conv	P91 A11	Cowl Anti-ice Valve, Engine 2	P18-3 A9	Entertainment, Aud, RH	P6-1 C8	Gaspar Fan	P6-4 E7
Air Cond Bleed Air, Press Ind	P6-4 B5	ATC 1	P18-1 B5	Crew Call	P6-3 B7	Entertainment, Aud, PA Tape (AC)	P6-1 C9	Gen 1 Load Shed	P91 C7
Air Cond Bleed Air, Valve Isln	P6-4 A5	ATC 2	P6-1 D14	Cross Feed Valve	P18-2 A9	Entertainment, Aud, ENT VID-DC	P6-1 C10	Gen 2 Load Shed	P92 C7
Air Cond Bleed Air, Valves Left	P6-4 A7	ATC, Ant switch	P6-1 E14	Data Loader	P18-2 A9	Entertainment, Aud, ENT VID-AC	P6-1 C11	Generator Control Unit 1	P6-4 F10
Air Cond Bleed Air, Valves Right	P6-4 B7	Audio, Capt	P6-2 D23	DC Bus 1, Sect 2	P91 C12	Entertainment, Aud, Video 1	P6-1 C12	Generator Control Unit 2	P6-4 F11
Air Cond Bleed Air, XDCR Left	P6-4 A6	Audio, F/O	P6-2 D22	DC Bus 1, Sect 1	P91 A2	Entertainment, Aud, Video2	P6-1 C13	Generator, APU Gen Cont Unit	P6-4 F12
Air Cond Bleed Air, XDCR Right	P6-4 B6	Audio, Obs	P6-2 D24	DC Bus 2, Sect 1	P92 C12	Equip Cool Exh Fan Control, Altn	P6-4 C15	Generator, Bus Pwr Cont Unit	P6-4 F13
Air Cond Compt Lt	P92 C3	Aural Warn	P6-3 D18	DC Bus 2, Sect 2	P92 A2	Equip Cool Exh Fan Control, Norm	P6-4 C14	Generator Disc 1	P6-4 F8
Air Cond Mix Valve Pos Ind (6-7)	P6-4 D7	Auto Brakes Control	P6-3 A17	DC Bus 1 XFR	P91 A1	Equip Cool Exh Fan Power - Norm	P91 E1	Generator Disc 2	P6-4 F9
Air Cond Ovbd Exh Valve, Cont	P6-4 D1	Auto Brake Cont 1	P6-3 A18	DC Bus 2 XFR	P92 A1	Equip Cool Exh Fan Power - Altn	P92 A10	GPS 1/MMR 1	P18-1 A7
Air Cond Ovbd Exh Vlv, Recon Cont	P6-4 D1	Auto Brake Cont 2	P6-3 A16	DC Bus Indication, Bat	P6-4 F14	Equip Cool Low Flow Dect, Supply	P18-3 A17	GPS 2/MMR 2	P6-1 A9
Air Cond Overheat (6-7)	P6-4 C4	Auto Slat DC 1	P6-2 C14	DC Bus Indication, Bus 1	P6-4 F16	Equip Cool Low Flow Dect, Exhaust	P18-3 A18	Grey Water Drain Valve	P18-3 E19 A9
Air Cond Pack/Eng Bled Air, Oht, Lt	P6-4 C8	Auto Slat DC 2	P6-2 B14	DC Bus Indication, Bus 2	P6-4 F18	Equip Cool Sup Fan Control, Altn	P6-4 C13	Ground Prox Warn	P18-1 B7
Air Cond Pack/Eng Bled Air, Oht, Rt	P6-4 C9	Auto Speed Brake	P6-2 B9	DC Bus Indication, Hot Bat	P6-4 E15	Equip Cool Sup Fan Control, Norm	P6-4 C12	Ground Serv 1, Sect 1	P91 E5
Air Cond Pack Cont, Lt Elect DC (8)	P6-4 A7	Auto Throttle DC 1	P18-1 E1	DC Bus Indication, Sw Hot Bat	P6-4 E16	Equip Cool Sup Fan Power, Altn	P91 A8	Ground Serv 1, 28 vac	P91 E11
Air Cond Pack Cont, Lt Elect AC (8)	P6-4 A11	Auto Throttle DC 2	P18-1 E3	DC Bus Indication, Stby	P6-4 E18	Equip Cool Sup Fan Power, Normal	P92 A8	Ground Serv 2, 28 vac	P92 E6
Air Cond Pack Cont, Rt Elect DC (8)	P6-4 B9	Aux Battery Charger	P91 E3	Display, Capt EFIS Control Panel	P18-2 D1	Ext Pwr	P91 A12	Ground Serv Clg Night Cont	P91 C4
Air Cond Pack Cont, Rt Elect AC (8)	P6-4 B11	Aux Power Unit Cont	P6-4 A14	Display, Capt Inbd	P18-2 D3	Ext Pwr 1	P92 A18	Ground Serv Cont	P6-4 E13
Air Cond Pack Cont Valve, Left	P6-4 C6	Aux Power Unit SCU Fan Power	P6-4 B14	Display, Capt Outbd	P18-2 D4	Ext Pwr 2	P92 A15	Ground Serv DC 1	P6-4 D11
Air Cond Pack Cont Valve, Right	P6-4 C5	Bat Bus, Sect 1	P6-5 C4	Display, Ctr Lwr	P18-2 D2	Ext Pwr BPCU	P92 A12	Ground Serv DC Hot Bat	P6-4 E12
Air Cond Ram Air Mod Cont, Left	P6-4 A8	Bat Bus, Sect 2	P6-5 C5	Display, Ctr Up	P6-1 D2	Fasten Seat Belt, Left	P18-3 C9	Ground Serv Wdo Brt Cont	P92 C1
Air Cond Ram Air Mod Cont, Right	P6-4 B8	Bat Bus, Sect 3	P6-5 A1	Display, DEU 1 Holdup	P6-1 D10	Fasten Seat Belt, Right	P18-3 C8	Heads Up Guidance, Cmp Altn DC	P18-2 C6
Air Cond Ram Air Mod Left	P6-4 A4	Bat Charger	P92 E1	Display, DEU 1 Pri	P18-2 D5	FCC AFCS System B (DC)	P6-2 B3	Heads Up Guidance, Cmptr DC	P18-2 C5
Air Cond Ram Air Mod Right	P6-4 B4	Bat / Stby, Sw Pos Ind	P6-5 B5	Display, DEU 2 Holdup	P6-1 D9	Fire Detect, Ovrht, WW, Wing-Body	P6-2 A19	Heads Up Guidance, Cont Panel DC	P18-2 C4
Air Cond Recirc Fan, Cabin (6-7)	P6-4 E4	Bleed Air, Overheat, Right	P6-4 C7	Display, DEU 2 Pri	P6-1 D11	Fire Detect, APU	P6-2 A23	Heads Up Guidance, DEU AC	P18-2 C3
Air Cond Recirc Fan, Cont (6-7)	P6-4 E1	Bleed Air, Overheat, Left	P6-4 C8	Display, FO EFIS Cont Panel	P6-1 E13	Fire Detect, Engine 1	P6-2 A24	Heads Up Guidance, DEU Altn AC	P18-2 C1
Air Cond Recirc Fan, Rt Cont (8)	P6-4 E2	Bleed Air, Press Ind	P6-4 B5	Display, FO Inbd	P6-1 E11	Fire Detect, Engine 2	P6-2 A22	Heads Up Guidance, Pwr Mon AC	P18-2 C2
Air Cond Recirc Fan, Rt Cabin Air (8)	P6-4 E4	Bleed Air, Valve Isln	P6-4 A5	Display, FO Outbd	P6-1 E10	Fire Detect, MA Warn & Cont	P6-2 A21	HF1	P18-2 E11
Air Cond Temp Cont, 35° F Lt (6-7)	P6-4 A1	Bleed Air, Valves Left	P6-4 A7	DME 1	P18-1 B3	Fire Detect, MA Warn & Cont	P6-2 A21	HF2	P6-1 D2
Air Cond Temp Cont, 35° F Rt (6-7)	P6-4 B1	Bleed Air, Valves Right	P6-4 B7	DME 2	P6-1 A14	Fire Extinguishers, APU	P6-2 B21	Hose Heaters	P18-3 F16 or E18
Air Cond Temp Cont, Auto Lt (6-7)	P6-4 A2	Bleed Air, XDCR Left	P6-4 A6	Door Area Heater - Fwd	P91 A16	Fire Extinguishers, Right	P6-2 B20	Hot Bat Bus	P6-5 B3
Air Cond Temp Cont, Auto Rt (6-7)	P6-4 B2	Bleed Air, XDCR Right	P6-4 B6	Door Area Heater - Aft	P91 A14	Fire Extinguishers, Left	P6-2 B22	Hyd , Brake Press Ind	P6-2 A13
Air Cond Temp Cont, Manual (6-7)	P6-4 A3	Boost Pump, Tank, Center Left	P91 D6	Door Area Heat Cont	P18-3 E11	Fire Extinguishers, Altn Right	P6-2 B23	Hyd , Landing Gear Xfer Valve, Prim	P6-2 C16
Air Cond Temp Cont/Valve Close Lt (8)	P6-4 A1	Boost Pump, Tank, Center Right	P92 D6	Door Lock	P6-3 E1	Fire Extinguishers, Altn Left	P6-2 B24	Hyd , Landing Gear Xfer Valve, Sec	P6-2 C15
Air Cond Temp Cont/Valve Close Rt (8)	P6-4 B1	Boost Pump, Tank 1, Aft	P92 D2	Dual Bat RCCB Remote	P6-5 A4	Flap Load Relief	P6-2 A6	Hyd , PTU Valve, Cont 1	P6-2 A15
Air Cond Temp Ind	P6-4 D8	Boost Pump, Tank 1, Fwd	P91 D2	EFCS Pwr Power	P6-12 A8	Flap Shutoff Valves	P6-2 A7	Hyd , PTU Valve, Cont 2	P6-2 A16
Air Cond Temp Valv/Fan Cont, Aft Pass (8)	P6-4 A3	Boost Pump, Tank 2, Aft	P91 D4	EFIS, Cont Panel, Capt	P18-2 D1	Flight Cont Shutoff Valve, Flt Cont	P6-2 B13, C13	Hyd Pump, Sys A	P92 F3
Air Cond Temp Valv/Fan Cont, Fwd Pass (8)	P6-4 B2	Boost Pump, Tank 2, Fwd	P92 D4	EFIS, Cont Panel, F/O	P6-1 E13	Flight Cont Shutoff Valve, Spoiler	P6-2 B12	Hyd Pump, Sys B	P91 F3
Air Cond Temp Valv/Fan Cont, Flt Dk (8)	P6-4 B3	Brake Pressure Indicator	P6-2 A13	Elect, AC Bus, Stby Bus, AC Disc	P6-4 D15	Flight Cont Shutoff Valve, Stby Rud	P6-2 C11	Hyd Eng Pump Depress Valve 1	P6-2 B15
Air Cond Trim Air Press (8)	P6-4 D9	Brakes, Anti-skid, Inboard	P6-3 E16	Elect, AC Bus, Stby Bus, AC Ind	P6-4 D16	Flight Cont Altn T.E. Flap Drive	P6-2 D13	Hyd Eng Pump Depress Valve 2	P6-2 A17
Air Cond Zone Tem, Dct Ovht, Aft Pass (8)	P6-4 C2	Brakes, Anti-skid, Outboard	P6-3 E18	Elect, AC Stby Bus Pwr	P6-4 D18	Flight Recorder AC	P18-2 C9	Hyd , Electric Pump Cont Sys A	P92 C8
Air Cond Zone Tem, Dct Ovht, Fwd Pass (8)	P6-4 C3	Bus Power Control Unit	P6-4 F13	Elect, Battery Charger	P91	Flight Recorder DC	P18-2 C10	Hyd , Electric Pump Cont Sys B	P91 C8
Air Cond Zone Tem, Dct Ovht, Flt Deck (8)	P6-4 C4	Bus Power Control Unit	P91 C10	Elect, Gnd Svc DC Hot Bat	P6-4 E12	Flight Recorder, Position Sensor	P18-2 C8	Hyd Shutoff Valve, Eng 1	P6-2 C19
Airphone	P6-1 E2	C/B NATS	P6-1 E2	Elect, Gnd Svc Cont	P6-4 E13	FMCS Bite DC	P18-2 B10	Hyd Shutoff Valve, Eng 2	P6-2 C18
Alternate Power, Engine 1, Chan B	P18-2 A4	Clock	P18-3 A2	Elect, TR 3 XFR Relay Cont	P6-4 E11	FMCS CDU 1	P18-2 A7		
Alternate Power, Engine 1, Chan A	P18-2 A5	Cargo Fire, Ext 1	P18-3 B16	Elect, Txfer Bus 1, 26v AC, Sect 2	P18-3 C5	FMCS CDU 2	P6-1 D15		
Alternate T.E. Flap Drive	P6-2 D13	Cargo Fire, Fwd Det B	P18-3 B17	Elect, Txfer Bus 2, 115v AC, Ind	P6-4 D13	FMCS Cmptr No 1	P18-2 E8 & A6		
Anti-ice, Alpha Vane Heater, Left	P18-3 C3	Cargo Fire, Fwd Det A	P18-3 C16	Elect, Txfer Bus 2, 26v AC, Sect 2	P6-4 D14	FMCS, Cmptr 1	P18-2 A6		
Anti-ice, Alpha Vane Heater, Right	P18-3 D3	Cargo Fire, Aft Det B	P18-3 C17	Elevator Tab Valve Right	P6-2 B8	FMCS, Cmptr 2	P6-1 D16		
Anti-ice, Aux Pitot	P18-3 D6	Cargo Fire, Aft Det A	P18-3 C18	Elcx Panel lights, Capt Fwd/Aft, Centr, F/O	Aft	FMCS, MCDU 1	P18-2 A7		
Anti-ice, Capt Pitot	P18-3 C1	Cargo Fire, Aft Det A	P18-3 C19			FMCS, MCDU 2	P6-1 D15		
Anti-ice, Drain Heater	P18-3 E5					FMCS, Xfr	P6-1 E15		

Ignition, Engine 1, Left	P18-2 A3	Light, Ind Master Dim, Sect 1	P6-3 E11	Main Bus 1	P91 F6	Recirc Fan, Right Control (8)	P6-4 E2	Vacuum Outlet, Aft	P92 E9
Ignition, Engine 1, Right	P18-2 A1	Light, Ind Master Dim, Sect 2	P6-3 E12	Main Bus 2	P92 F6	RMI 1	P18-1 A9	Vacuum Outlet, Fwd	P92 E8
Ignition, Engine 2, Left	P6-2 D6	Light, Ind Master Dim, Sect 3	P6-3 E13	Marker Beacon 2	P6-1 A13	Rudder Authority Limiter	P6-2 C5	Vacuum Waste	P18-3 D19
Ignition, Engine 2, Right	P6-2 D4	Light, Ind Master Dim, Sect 4	P6-3 E14	Master Caution, Annunciator Bus 1	P6-3 B12	Rudder Trim Indicator	P6-2 D16	Vacuum Waste Blower	P91 F2
ILS 1	P18-1 A2	Light, Ind Master Dim, Sect 5	P6-3 F11	Master Caution, Annunciator, Bat	P6-3 B13	Run/Pwr, Eng 1	P18-2 B3	Vacuum Waste Cont	P91 C11
ILS 2	P6-1 A13	Light, Ind Master Dim, Sect 6	P6-3 F12	Master Caution, Annunciator, Cont 1	P6-3 C11	Run/Pwr, Eng 2	P6-2 B5	VHF 1	P18-2 D11
Instrument Transfer	P18-2 A2 & E2	Light, Ind Master Dim, Sect 7	P6-3 F13	Master Caution, Annunciator, Cont 2	P6-3 C12	SELCAL 1	P18-2 D15	VHF 2	P6-1 C3
Instrument Transformer 1	P18-2 A1	Light, Ind Master Dim, Sect 8	P6-3 F14	Master Caution, Annunciator, Cont 3	P6-3 C13	Sensor Exc, AC, AFCS Sys A	P18-1 C5	VHF 3	P18-2 D12
Inst Transformer 2	P6-1 A12	Light, Landing, Left Fixed	P18-3 B15	Master Caution, Annunciator, Cont 4	P6-3 C14	Service Outlet, 28 VDC	P6-3 F1	VID Cont Center AC	P6-1 C7
Intpnd and Warn (Interphone & Warn)	P6-2 D21	Light, Landing, Left Retractable	P18-3 C15	MCP DC 1	P18-1 D5	Service Outlet	P92 E7	VID Cont Center DC	P6-1 C5
Interphone Power, Capt DC 2	P6-2 C23	Light, Landing, Right Fixed	P18-3 C14	MCP DC 2	P6-2 C3	Shaver Outlet 115 VAC	P18-3 F12	Video 1	P6-1 D5
Interphone Power, Capt Bat	P6-2 C24	Light, Landing, Right Retractable	P18-3 B14	MIDU	P6-3 A1	SMYD-1, Computer DC	P18-2 E5	Video 2	P6-1 D6
Interphone Power, F/O DC 2	P 6-2 C21	Light, Lavatory Mirror	P18-3 E14	MMR 1 (GPS 1)	P18-1 A2	SMYD-2, Computer DC	P6-1 B5	Video 3	P6-1 D7
Interphone Power, F/O (Bat)	P6-2 C22	Light, Lav Occupied Sign	P18-3 D9	MMR 2 (GPS 2)	P6-1 A13	SMYD-1, Sensor EXC AC	P18-2 E6	Video 4	P6-1 D8
Inverter, Remote	P6-5 A5	Light, LCD	P6-4 F1	MPES MK II, Aeris Fx	P6-1 C8	SMYD-2, Sensor EXC AC	P6-1 B4	Voice Recorder	P18-2 D7
Inverter Volts	P6-5 A2	Light, Logo, Illum	P18-3 A15	MPES MK II, Main Mux	P6-1 C7	SPCU, Normal	P6-5 B1	VOR / MKR BCN 1	P18-1 A1
Landing Gear, Air/Gnd Sys 1	P6-3 C16	Light, Map & Kit	P6-3 A9	MPES MK II, VCC 28 vac	P6-1 C9	SPCU, Standby	P6-5 B2	VOR 2	P6-1 A12
Landing Gear, Air/Gnd Sys 2	P6-3 C15	Light, Nose Gear Taxi	P18-3 D14	MPES MK II, VCC 115 vac	P6-1 C10	Spoiler Shutoff Valve	P6-2 B12	Waste, Water Line Heaters	P18-3 D18
Landing Gear, Air/Gnd Relay	P6-3 D15	Light, Observer Reading	P6-3 A10	MPES MK II, VDU 1-4	P6-1 C11	Stabilizer Trim	P18-1 C2	Water Drain Valve, Grey	P18-3 E19 A9
Landing Gear, Altn Extend Sol	P6-3 D16	Light, Overhead, 28V Primary	P6-3 D9	MPES MK II, VDU 5-7	P6-1 C12	Stab Trim Actuator	P6-2 D10	Water Qty Ind	P91 C9
Landing Gear, Anti-skid, Inboard	P6-3 E16	Light, Overhead, 28V Sec	P6-3 D10	MPES MK II, VDU 8-10	P6-1 C13	Stab Trim Control	P6-2 B10	Weather Radar, R/T	P6-1 D13
Landing Gear, Anti-skid, Outboard	P6-3 E18	Light, Overhead, 5V Sec	P6-3 E8	Nav Control Panel 1	P18-1 A3	Stall Warn, Asym Mode	P18-2 E7	Window Heat Control, Lt Front AC	P18-3 E1
Landing Gear, Aural Warn	P6-3 D18	Light, Overhead, 5V Sec	P6-3 E9	Nav Control Panel 2	P6-1 A15	Standby Altn / ASI Vib	P18-2 D10	Window Heat Control, Lt Front DC	P18-3 F2
Landing Gear, Autobrake Bite Cont 1	P6-3 A18	Light, Overhead, 5V Sec	P6-3 E10	Nav Sensor DC-1	P18-1 B1	Standby Att Ind	P18-2 D9	Window Heat Control, Lt Side AC	P18-3 D2
Landing Gear, Autobrake Bite Cont 2	P6-3 A16	Light, Overhead, 5V Sec	P6-3 F8	Nav Sensor DC-2	P6-1 A10	Standby Bus, 28v AC Dist	P6-4 D15	Window Heat Control, Lt Side DC	P18-3 D2
Landing Gear, Autobrake Bite	P6-3 A17	Light, Overhead, 5V Sec	P6-3 F9	No Smoking, Left	P18-3 C11	Standby Bus, 115v AC Ind	P6-4 D16	Window Heat Control, Rt Front AC	P18-3 D1
Landing Gear, Latch & Press Warn	P6-3 B17	Light, Overhead, 5V Sec	P6-3 F10	No Smoking, Right	P18-3 C10	Standby Bus, Sect 1	P6-5 C1	Window Heat Control, Rt Front DC	P18-3 E2
Landing Gear, Nose Gear Steering	P6-3 D17	Light, Panel & Instr, 28V Prim, Capt	P6-3 B9	Overboard Exh Vlv, Cont	P6-4 D1	Standby Bus, Sect 2	P6-5 C2	Window Heat Control, Rt Side AC	P18-3 E2
Landing Gear, Parking Brake	P6-3 B16	Light, Panel & Instr, 28V Prim, F/O	P6-3 B10	Overboard Exh Vlv, Reconfig Cont	P6-4 D2	Standby Hydraulic Pump	P92 F2	Window Heat Control, Rt Side DC	P18-3 E2
Landing Gear, Takeoff Warn Cutoff	P6-3 C18	Light, Panel & Inst, CB Panel	P6-3 C9	Overwing Flight Lock, Left	P6-2 D2	Start Lever, Eng 1, Channel A	P18-2 B1	Window Heat Power, Lt Front	P6-11 B9
Landing Gear Xfer Valve, Primary	P6-2 C16	Light, Panel & Inst, Elex Panel	P6-3 C10	Overwing Flight Lock, Right	P6-2 D1	Start Lever, Eng 2, Channel B	P18-2 B2	Window Heat Power, Lt Side	P6-12 A9 or B9
Landing Gear Xfer Valve, Second	P6-2 C15	Light, Panel Flood Cont	P6-3 A11	Overheat, Wheel Well, Wing-Body	P6-2 A19	Start Lever, Eng 2, Channel A	P6-2 B6	Window Heat Power, L4 & L5	P6-11 B7
Lavatory Hose Heaters	P18-3 F16	Light, Panel Flood Stby	P6-3 A12	Oxygen, Indicator	P18-3 F7	Start Lever, Eng 2, Channel B	P6-2 B7	Window Heat Power, RtFront	P6-12 A8 or B8
Lavatory Occupied Sign	P18-3 D9	Light, Pass Read, Rt, Sta 340-451	P92 P92	Oxygen, Manual Control	P18-3 F8	Start Valve Eng 1	P18-2 B8	Window Heat Power, RtSide	P6-11 B8
Lavatory Smoke	P18-3 E12	Light, Pass Read, Rt, Sta 451-500E	P92 P92	Oxygen, Pass, Left	P18-3 F10	Start Valve Eng 2	P6-2 C4	Window Heat Power, R4 & R5	P6-12 A7 or B7
Lavatory Water Heaters, A	P18-3 F13	Light, Pass Read, Rt, Sta 500E-552	P92 P92	Oxygen, Pass, Right	P18-3 F9	Stick Shaker, Left	P18-2 E4	Windshield Wiper, Lt	P18-3 B3
Lavatory Water Heaters, D	P18-3 F14	Light, Pass Read, Rt, Sta 552-692	P92 P92	PA Amp, Bat	P6-1 D4	Stick Shaker, Right	P6-1 B6	Windshield Wiper, Rt	P18-3 B1
Lavatory Water Heaters, G	P18-3 F15	Light, Pass Read, Rt, Sta 692-727B	P92 P92	Pack Controller, Left Electronic (8)	P6-4 A9	Switched Hot Batt Bus	P6-5 B4	Wing Anti-ice Valve	P18-3 A1
Light, Access Comp	P91 C5	Light, Pass Read, Rt, Sta 727G-727G	P92 P92	Pack Controller, Left Electronic (8)	P6-4 A11	Takeoff Warning Cutoff	P6-3 C18	XFR BUS 1 SECT 1	P91 F4
Light, Air Cond Compt	P92 C3	Light, Pass Read, Rt, Sta 727G-768	P92 P92	Pack Controller, Right Electronic (8)	P6-4 B9	TCAS	P18-1 B6	XFR BUS 1 SECT 2	P91 F5
Light, Anti-collision Red	P18-3 B12	Light, Pass Read, Rt, Sta 768-880	P92 P92	Pack Controller, Right Electronic (8)	P6-4 B11	Temp Control, 35° F Left (6-7)	P6-4 A1	XFR BUS 2 SECT 1	P92 F4
Light, Anti-collision White	P18-3 B13	Light, Pass Read, Rt, Sta 880-937	P92 P92	Pack Controller, Right Electronic (8)	P6-4 B11	Temp Control, 35° F Right (6-7)	P6-4 B1	XFR BUS 2 SECT 2	P92 F5
Light, Auto Dim Entry	P6-4 E10	Light, Pass Read, Lt, Sta 340-451	P91 B1	Pack Cont Valve, Left	P6-4 C6	Temp Control, Auto Left (6-7)	P6-4 A2	Yaw Damper AC	P18-1 C7
Light, Capt Panel (3)	CA Rud Adj	Light, Pass Read, Lt, Sta 451-500E	P91 B4	Pack Cont Valve, Right	P6-4 C5	Temp Control, Auto Right (6-7)	P6-4 B2	Yaw Damper 1 DC	P18-1 D7
Light, Cargo Compt Lt Aft	P92 C5	Light, Pass Read, Lt, Sta 500E-552	P91 B8	Parking Brake	P6-3 B16	Temp Control, Manual (6-7)	P6-4 A3	Yaw Damper Indicator	P18-1 C6
Light, Cargo Compt Lt Fwd	P92 C4	Light, Pass Read, Lt, Sta 552-692	P91 B9	Passenger Call Right	P18-3 B8	Temp Control, Valve Close Left (8)	P6-4 A1	Yaw Damper 2 DC	P18-1 D6
Light, Cargo Compt Lt Mid	P92 C5	Light, Pass Read, Lt, Sta 692-727B	P91 B9	Passenger Call Left	P18-3 A8	Temp Control, Valve Close Right (8)	P6-4 B1	Zone Temp, Duct Ovht, Aft Pas (8)	P6-4 C2
Light, Cargo Light Cont	P92 C10	Light, Pass Read, Lt, Sta 727B-727GP	P91 B8	Passenger Crew Call	P18-3 A9	Temperature Ind (600/700)	P6-4 D2	Zone Temp, Duct Ovht, Fwd Pas (8)	P6-4 C3
Light, Ceiling, Right	P91 D11	Light, Pass Read, Lt, Sta 727G-768	P91 B9	Passenger Sign Cont	P18-3 D11	Terrain Display	P18-1 A7	Zone Temp, Duct Ovht,Flt Deck (8)	P6-4 C4
Light, Ceiling, Left	P91 D12	Light, Pass Read, Lt, Sta 768-880	P91 B9	PC Power, Y/C	P6-12 A8	Thrust Reverser, Cont, Eng 1	P18-2 B5		
Light, Center Console Panel, Fwd,	Aft Console	Light, Pass Read, Lt, Sta 880-937	P91 B9	PC Power, F/C	P6-12 A5	Thrust Reverser, Cont, Eng 2	P6-2 C7		
Light, Center Panel (2)	CA Rud Adj	Light, Position, Left	P18-3 A13	Pot Water Compressor	P91 A18	Thrust Reverser, Ind, Eng 1	P18-2 B4		
Light, Circuit Breaker Panel	P6-3 C9	Light, Position, Right	P18-3 A12	Pressurization Control, Auto 1	P6-4 F3	Thrust Reverser, Ind, Eng 2	P6-2 C8		
Light, Compass, Standby	P6-3 A13	Light, Runway Turnoff, Left	P18-3 C13	Pressurization Control, Auto 2	P6-4 F5	Thrust Reverser, Interlock, Eng 1	P18-2 B6		
Light, Cont 1	P6-3 C11	Light, Runway Turnoff, Right	P18-3 C12	Pressurization Control, Manual	P6-4 F7	Thrust Reverser, Interlock, Eng 2	P18-2 B7		
Light, Cont 2	P6-3 C12	Light, Sect 1	P6-3 E11	Pressurization Control, LCD Ltg	P6-4 F6	Thrust Reverser, Sync Lock, Eng 1	P6-2 C6		
Light, Cont 3	P6-3 C13	Light, Sect 2	P6-3 E12	PRTR (printer)	P6-4 F1	Thrust Reverser, Sync Lock, Eng 2	P6-2 C5		
Light, Cont 4	P6-3 C14	Light, Sect 3	P6-3 E13	Probe, Indication, Capt	P6-1 E5	Total Air Temperature Indicator	P18-2 A7		
Light, Control Stand	P6-3 A8	Light, Sect 4	P6-3 E14	Probe, Indication, F/O	P6-3 F18	TR1	P91 A6		
Light, Dome White	P6-3 A15	Light, Sect 5	P6-3 F11	PSEU, Altn	P6-3 F16	TR3 ALTN	P91 A4		
Light, Elec Rack, Fwd	P91 C2	Light, Sect 6	P6-3 F12	PSEU, DC 1	P6-3 D2	TR3, DC Indicator	P6-5 C3		
Light, Elec Panel	P6-3 C10	Light, Sect 7	P6-3 F13	PSEU, DC 2	P6-2 A8	TR3 XFR Relay Cont	P6-4 E11		
Light, Emer and F/O's Panel (5)	FO Rud Adj	Light, Sect 8	P6-3 F14	PSEU, Primary	P6-2 A9	Trail Edge Flap Pos Skew Snsr & Ind, Rt	P6-2 A11		
Light, Emer Chgr, Fwd	P18-3 A11	Light, Secty Compass	P6-3 A14	PTU Valve, Cont 1	P6-3 D1	Trail Edge Flap Pos Skew Snsr & Ind, Lt	P6-2 A12		
Light, Emer Chgr, Left Aft	P18-3 A10	Light, Thrsh	P91 C1	PTU Valve, Cont 2	P 6-2 A15	Transfer Bus 1 Sect 2, 28 VAC	P18-3 C5		
Light, Emer Chgr, Right Aft	P18-3 B10	Light, WDO, Left	P92 E12	Radio Altim 1	P18-1 B4	Transfer Bus 1, 28 VAC	P91 B10		
Light, Emer Panel	P6-3 D8	Light, WDO, Right	P92 E11	Radio Altim 2	P6-1 A16	Transfer Bus 2, 28 VAC	P92 B10		
Light, Entry Brt	P91 E10	Light, Wheel well	P92 C2	Ram Air Mod Cont, Left	P6-4 A8	Transfer Bus 2, 115 VAC Ind	P6-4 D13		
Light, Entry Dim	P6-4 E9	Light, Window, Left	P92 E12	Ram Air Mod Cont, Right	P6-4 B8	Transfer Bus 2, Sect 2, 28 VAC	P6-4 D14		
Light, Galley	P18-3 B10	Light, Window, Right	P92 E11	Ram Air Mod Left	P6-4 A4	Trim Air Press (800)	P6-4 D9		
Light, Galley	P92 E10	Light, Wing Scan	P18-3 A14	Ram Air Mod Right	P6-4 A4	Trim Control, Aileron	P6-2 D18		
Light, General Light Cont	P18-3 D12	Light, Work and Thrsh	P91 C3	RCCB, Remote	P6-4 B4	Trim Control, Rudder	P6-2 D19		
Light, Gnd Serv Cig Night Cont	P91 C4	Mach Trim, AC Sys A	P18-1 C4	Recirc Fan, Cabin	P6-5 A4	Trim Indicator, Rudder	P6-2 D16		
Light, Gnd Serv Wdo Brt Cont	P6-3 D12	Mach Trim, DC Sys A	P18-1 D4	Recirc Fan, Left Cabin Air (8)	P6-4 E4	TRU 1	P91 A6		
Light, Ind Master Dim, Bat	P6-3 D12	Mach Trim, AC Sys B	P6-2 C1	Recirc Fan, Right Cabin Air (8)	P18-3 E7	TRU 2	P92 A4		
Light, Ind Master Dim, DC 1	P6-3 D13	Mach Trim, DC Sys B	P6-2 B2	Recirc Fan, Control	P6-4 E4	TRU 3	P92 A6		
Light, Ind Master Dim, DC 2	P6-3 D14	Mach Warn Sys 1	P18-2 E3	Recirc Fan, Left Control (8)	P6-4 E1	TRU 3 Altn	P91 A4		
Light, Ind, Master Dim, / Test Cont	P6-3 D11	Mach Warn Sys 2	P6-1 B7		P18-3 E9				