

A Sys Pressure Indicator, Hyd	P6-2	D17	APU Fire Detection	P6-2	A23	DC Bus Ind, Bus 2, Galley Cont	P6-5	C5	Electrical, Inverter Control	P6-5	A 1	FMC, DAA 2 (AC)	P6-1	D8
A Sys, Electric Hyd Pump Cont	P6-2	A15	APU Fire Extinguisher Bottle	P6-2	C23	DC Bus Ind, TR No. 3	P6-5	C6	Electrical, Inverter Power	P6-5	A 2	FMCS CDU 1	P18-2	E9
A Sys, Electric Hydraulic Pump	P6-12	C2	APU Fuel Boost Pump (option)	P6-5	C8	DC Bus, No 1 Electronics	P18-0	3	Electrical, Inverter Volts Ind	P6-5	D 5	FMCS CDU 2	P18-2	E6
A Sys, Hyd Oil Quantity Ind	P6-2	C17	APU Generator, AC Indication	P6-4	A11	DC Bus Power, No 1	P6-5	B8	Electrical, Service Outlets (115V)	P6-3	E 1	FMCS Cmptr No 1	P18-2	E8
AC Bus 1, A phase	P6-4	B13	APU Start	P18-5		DC Bus 2	P6-4	D6	Electrical, Service Outlets (28V)	P6-3	F 1	FMCS Mode Annunciator	P18-2	E 7
AC Bus 1, B phase	P6-4	B14	ASYM Mode	P18-2	D7	DC Bus Power No.2	P6-5	B7	Electrical, Standby Bus	P6-4	F17	F/O ADI (ALTN)	P18-2	B2
AC Bus 1, C phase	P6-4	B15	ATC 1	P18-1	B3	DC Bus, Electronics 2	P6-1	E15	Electrical, Standby Bus Indication	P6-5	D1	Fwd Outflow Valve	P6-4	C5
AC Bus 2, A phase	P6-4	B10	ATC 2	P6-1	D16	DC Standby Power, Battery	P6-5	D2	Electrical, Standby Bus, Power	P6-4	F16	Fuel Boost Pump, Aux Tank, Aft	P6-3	F7
AC Bus 2, B phase	P6-4	B11	Aural Warn	P6-3	D18	DC Standby Power, T/R	P6-5	D3	Electrical, TR 1	P6-4	A8	Fuel Boost Pump, Aux Tank, Fwd	P6-3	F3
AC Bus 2, C phase	P6-4	B12	Auto Brakes Control	P6-3	A17	Depressure Valve, Engine 1, Hyd	P6-2	B17	Electrical, TR 2	P6-4	C8	Fuel Boost Pump, Center Tank, Left	P6-3	E5
AC Bus, No 1 Electronics	P18-0	2	Auto Slat 1 (AC)	P6-2	B14	Depressure Valve, Engine 2, Hyd	P6-2	B16	Electrical, TR 3	P6-4	E8	Fuel Boost Pump, Center Tank, Right	P6-3	D5
AC Bus, Electronics 2, 3 phase	P6-1	E13	Auto Slat 1 (DC)	P6-2	B15	DME 1	P18-1	B 6	Electrical, TR 3 Indication	P6-5	C6	Fuel Boost Pump, Tank 1, Aft	P6-3	C7
AC Transfer Indicator	P6-5	D6	Auto Slat 2 (AC)	P6-2	C14	DME 2	P6-1	C16	Electrical, Trans Cont 1	P6-4	E10	Fuel Boost Pump, Tank 1, Fwd	P6-3	B7
AC Transfer Bus 1, A phase	P6-4	C13	Auto Slat 2 (DC)	P6-2	C15	Door Lock	P6-3	C1	Electrical, Trans Cont 2	P6-4	E12	Fuel Boost Pump, Tank 2, Aft	P6-3	C3
AC Transfer Bus 1, B phase	P6-4	C14	Auto Speed Brake	P6-2	B9	Door Warn	P6-3	A2	Electrical, Transfer Bus Indication	P6-5	D6	Fuel Boost Pump, Tank 2, Fwd	P6-3	B3
AC Transfer Bus 1, C phase	P6-4	C15	Auto Throttle (AC)	P18-1	D3	Drain Heater	P18-3	D3	Electronics 1, AC Bus	P18-0	A2	Fuel Cont, 1 Aft, 2 Fwd, Ctr L, Aux Aft	P6-3	E3
AC Transfer Bus 2, A phase	P6-4	C10	Auto Throttle (DC)	P18-1	D4	Drain Mast, Air	P18-3	F5	Electronics 1, DC Bus	P18-0	A3	Fuel Cont, 1 Fwd, 2 Aft, Ctr R, Aux Fwd	P6-3	E7
AC Transfer Bus 2, B phase	P6-4	C11	Auto Transformer, Air Data 1	P18-2	A6	Drain Mast, Ground	P18-3	E5	Electronics 2, AC Bus 3 phase	P6-1	E13	Fuel Cross Feed Valve	P6-3	C5
ACARS MU (AC)	P18-2	E14	Auto Transformer, Air Data 2	P6-1	B5	EGT Ind 1	P6-2	A3	Electronics 2, DC Bus	P6-1	E15	Fuel Indicator, Flow/Used Engine 1	P6-3	A6
ACARS MU (DC)	P18-2	E15	Aux Power Unit Start	P18-5	C1	EGT Ind 2	P6-2	A2	Elevator Pitot, Left	P18-3	D2	Fuel Indicator, Flow/Used Engine 2	P6-3	A5
ADF 1	P18-1	B4	B Sys, Electric Hyd Pump Cont	P6-2	A14	EFIS, Cont Panel L	P18-2	E3	Elevator Pitot, Right	P18-3	D1	Fuel Panel Ind	P6-3	F6
ADF 2	P6-1	B15	B Sys, Electric Hydraulic Pump	P6-11	C2	EFIS, Cont Panel R	P6-1	C11	Elx Panel lights, Fwd, Capt, Centr, F/P	Aft		Fuel Quantity	P6-3	A4
ADI 1	P18-2	B1	B Sys, Hyd Oil Quantity Ind	P6-2	C16	EFIS, Sys Gen L	P18-2	E2	Pedestal			Fuel Quantity Ind, R Tank	P6-3	F3
ADI 1, ALTN	P6-1	C8	B Sys, Pressure Indicator, Hyd	P6-2	D16	EFIS, Sys Gen R	P6-1	C10	Emergency Exit Sign	P18-3	A12	Fuel Quantity Ind, Ctr Tank	P6-3	F4
ADI 2	P6-1	B8	Bat Bus	P6-5	C7	Electric Hyd Pump, Cont, Sys A	P6-2	A15	Engage Interlock, AFCS System A	P18-1	E4	Fuel Quantity Ind, L Tank	P6-3	F5
ADI 2, ALTN	P18-2	B2	Bat Bus Control, Auto	P6-5	B2	Electric Hyd Pump, Cont, Sys B	P6-2	A14	Engage Interlock, AFCS System B	P6-2	C3	Fuel Shutoff Valve	P6-3	B5
AFCS, Sys A, FCC (DC)	P18-1	E3	Bat Bus Control, Manual	P6-5	B3	Electric Hydraulic Pump, System A	P6-12	C 2	Eng 1, Cowl Anti-ice Valve	P18-3	A2	Fuel Shutoff Valve, Eng 1	P6-3	D7
AFCS, Sys A, Interlock, Engage	P18-1	E4	Bat Charger	P6-4	D8	Electric Hydraulic Pump, System B	P6-11	C 2	Eng 1 and Wing Control	P18-3	A4	Fuel Shutoff Valve, Eng 2	P6-3	D3
AFCS, Sys A, Mach Trim (AC)	P18-1	E6	Bat Charger	Equip Bay		Electrical, 1 Main (28V)	P6-4	E14	Eng 2, Cowl Anti-ice Valve	P18-3	A1	Fuel Temp Ind	P6-3	A3
AFCS, Sys A, Mach Trim (DC)	P18-1	E7	Bat Charger, Alternate	P6-4	F8	Electrical, 1 Trans (28V)	P6-4	E15	Eng 2 and Wing Control	P18-3	A3	Fuel, Aux Tank Fueling	P6-3	F5
AFCS, Sys A, Sensor Exc (AC)	P18-1	E1	Bat Indication	P6-5	C2	Electrical, 2 Main (28V)	P6-4	F14	Engine Vibration Monitor	P6-2	B4	Fuel and External Power Control	P6-5	B4
AFCS, Sys A, Warning Light (Bat)	P18-1	E2	Bat Overheat Indication	P6-5	C1	Electrical, 2 Trans (28V)	P6-4	F15	Entertainment Tape RPDR (AC)	P6-1	E6	Fuel, Ext Power, Ground Fueling	P6-3	A7
AFCS, Sys B, FCC (DC)	P6-2	C5	Bleed Air, Valves Left	P6-4	B3	Electrical, AC Bus 1, A phase	P6-4	B13	Entertainment Tape RPDR (DC)	P6-1	E5	Fuel, Master Caution	P6-3	D10
AFCS, Sys B, Interlock, Engage	P6-2	C3	Bleed Air, Valves Right	P6-4	B2	Electrical, AC Bus 1, B phase	P6-4	B14	Equipment Cool, Blower, Alt 3ph	P18-3	C18	Galley 1 & 6	P6-11	C7
AFCS, Sys B, Mach Trim (AC)	P6-2	B2	Boarding Music Tape (AC)	P6-1	E6	Electrical, AC Bus 1, C phase	P6-4	B15	Equipment Cool, Blower, Norm 3ph	P18-3	B18	Galley 1 & 6	P6-11	C8
AFCS, Sys B, Mach Trim (DC)	P6-2	B1	Boarding Music Tape (DC)	P6-1	E5	Electrical, AC Bus 2, A phase	P6-4	B10	Equipment Cool, Control	P18-3	A18	Galley 1 & 6	P6-11	C9
AFCS, Sys B, Sensor Exc (AC)	P6-2	C1	Brake Pressure Indicator	P6-2	A17	Electrical, AC Bus 2, B phase	P6-4	B11	External Power & Fueling Control	P6-5	B4	Galley 3	P6-12	C7
AFCS, Sys B, Warn Light (Bat)	P6-2	C4	Brakes, Anti-skid, Inboard	P6-3	E16	Electrical, AC Bus 2, C phase	P6-4	B12	External Power Control	P6-5	D4	Galley 3	P6-12	C8
AFDS Aileron Force Limiter	P18-1	D7	Brakes, Anti-skid, Outboard	P 6-3	E17	Electrical, AC Transfer Bus 1, Aph	P6-4	C13	External Power DC	Equip Bay		Galley 3	P6-12	C9
AFDS MCP (DC)	P18-1	D1	Brakes, Auto, Control	P 6-3	A17	Electrical, AC Transfer Bus 1, Bph	P6-4	C14	External Power, Bus Prot Panel (AC)	P6-12	D5	Galley Light	P18-3	B10
AFDS MCP Course #2, (DC)	P 6-2	B3	Brakes, Parking	P 6-3	E18	Electrical, AC Transfer Bus 1, Cph	P6-4	C15	External Power, Ground Service	P6-12	D8	Galley, Aft, Coffee Maker 1 & 2	Aft Galley	
Aileron Force Limiter, AFDS	P18-1	D9	Bus Protection Panel, Ext Pwr (AC)	P 6-12	D5	Electrical, AC Transfer Bus 2, Aph	P6-4	C10	External Power, Lavatory Mirror	P6-3	D1	Galley, Aft, Oven 1, 2 & 3	Aft Galley	
Aileron Trim Control	P 6-2	C7	Cabin Air Recirc Fan	P6-4	D5	Electrical, AC Transfer Bus 2, Bph	P6-4	C11	Extinguisher Bottle, APU	P6-2	C23	Galley, Aft, Warmer 1 & 2	Aft Galley	
Air Conditioning, Ram Air Mod Cont	P6-4	E2	Call Chimes, Passenger & Crew	P18-4	A1	Electrical, AC Transfer Bus 2, Cph	P6-4	C12	Extinguisher Bottle, Left	P6-4	C12	Galley, Aft, Work Light	Aft Galley	
Air Conditioning, Ram Air Mod Lt	P6-4	E3	CDU 1, FMCS	P18-2	E9	Electrical, APU Generator, AC Ind	P6-4	A11	Extinguisher Bottle, Left	P6-4	D11	Galley, Forward, Coffee Maker	Fwd Galley	
Air Conditioning, Ram Air Mod Rt	P6-4	E1	CDU 2, FMCS	P18-2	E6	Electrical, APU, Control	P6-4	D11	Extinguisher Bottle, Right	P6-2	C22	Galley, Forward, Oven 1 & 2	Fwd Galley	
Air Conditioning, Recirc Fan, Cabin	P6-4	D5	Chimes, Passenger & Crew	P18-4	A1	Electrical, Auto Cont	P6-5	A 6	Extinguisher Bottle, Right	P6-2	D23	Galley, Forward, Work Light	Fwd Galley	
Air Conditioning, Recirc Fan, Cont	P6-4	B4	Clacker	P6-1	C7	Electrical, Battery Charger	P6-4	D 8	Fasten Seat Belt	P18-3	A9	Generator 1, AC Indication	P6-4	A10
Air Conditioning, Recirc Fan, Energ	P6-4	B5	Clock	P6-3	B1	Electrical, Battery Charger	Equip Bay		FCC AFCS Sys A (DC)	P18-1	E3	Generator 1, Control	P6-4	D10
Air Conditioning, Temp Cont 35° Lt	P6-4	A2	Clock Display	P6-3	A1	Electrical, Battery Charger, Alt	P6-4	F8	FCC AFCS Sys B (DC)	P6-2	C2	Generator 1, Low Oil Pressure	P6-4	E11
Air Conditioning, Temp Cont 35° Rt	P6-4	A1	Cargo Smoke Control / Fault	P6-2	D22	Electrical, Battery Indication	P6-5	C2	FDR Position Sensor	P18-2	B2	Generator 1, Oil Temperature	P6-4	E10
Air Conditioning, Temp Cont Auto Lt	P6-4	A4	Cargo Smoke Detectors, B Loop	P6-2	B22	Electrical, Battery Overheat Ind	P6-5	C1	Fire Detection, Ovrht, WW, Wing-Body	P6-2	B24	Generator 2, AC Indication	P6-4	A12
Air Conditioning, Temp Cont Auto Rt	P6-4	A3	Cargo Smoke Detectors, B Loop	P6-2	B22	Electrical, Battery Trans Cont	P6-5	A3	Fire Detection, APU	P6-2	A23	Generator 2, Control	P6-4	D12
Air Conditioning, Temp Cont Man	P6-4	A5	Cargo Smoke Detectors, A Loop	P6-2	B23	Electrical, CSD 1 Control	P6-4	F11	Fire Detection, Engine 1	P6-2	A24	Generator 2, Low Oil Pressure	P6-4	E13
Air Conditioning, Temp Ind	P6-4	D2	Coffee Maker 1 & 2, Aft Galley	Aft Galley		Electrical, CSD 2 Control	P6-4	F13	Fire Detection, Engine 2	P6-2	A22	Generator 2, Oil Temperature	P6-4	E12
Air Data #1, Auto Transformer	P18-2	A6	Coffee Maker, Forward Galley	Fwd Galley		Electrical, DC Bus 1	P6-4	B 6	Fire Detection, Master Warn & Cont	P6-2	B23	Generator Bus 1, Main Distribution	P6-11	A2
Air Data #1, Computer (26V AC)	P18-2	A9	Comparator 2 (Mon)	P6-1	A 9	Electrical, DC Bus 1 Indication	P6-5	C4	Fire Extinguishers, Bottle, APU	P6-2	C23	Generator Bus 2, Main Distribution	P6-12	A2
Air Data #1, Computer (AC)	P18-2	A8	Comparator 2 (Pwr)	P6-1	A10	Electrical, DC Bus 2	P6-4	D6	Fire Extinguishers, Bottle, Right	P6-2	C24	Generator Power Control	P6-5	B5
Air Data 1, TAT Indicator	P18-2	A7	Compass 1, XFMR (ALTN)	P6-1	B12	Electrical, DC Bus 2 Indication	P6-5	C5	Fire Extinguishers, Bottle, Left	P6-2	D24	Glide Slope 1	P18-1	A2
Air Data 2, Altimeter (26V AC)	P6-1	B4	Compass 2, XFMR (ALTN)	P18-2	B4	Electrical, DC Standby Pwr, Battery	P6-5	D2	Fire Extinguishers, Bottle, Alt Right	P6-2	C22	Glide Slope 2	P6-1	A16
Air/Ground Relay & Lights	P6-3	C12	Computer, FMCS	P18-2	E 8	Electrical, DC Standby Pwr, T/R	P6-5	D3	Fire Extinguishers, Bottle, Altn Left	P6-2	D23	Ground Prox Warning	P18-1	A7
Auto Transformer 2	P6-1	B5	Cowl Anti-ice Valve, Eng 1	P18-3	A2	Electrical, Generator 1, AC Ind	P6-4	A10	Flap	P6-2	D12	Ground Service	P6-11	D8
Air Data 2, Computer (26V AC)	P6-1	B6	Cowl Anti-ice Valve, Eng 2	P18-3	A1	Electrical, Generator 1, AC Ind	P6-4	D10	Flap Load Relief	P6-2	D13	Ground Service AC Ind, A phase	P6-4	A13
Air Data 2, Computer (AC)	P6-1	B7	CSD 1 Control	P6-4	F11	Electrical, Generator 1, Low Press	P6-4	E11	Flap Position Ind, Leading Edge	P6-2	C12	Ground Service AC Ind, B phase	P6-4	A14
Alpha Vane Heater, Left	P18-3	D5	CSD 2 Control	P6-4	F13	Electrical, Generator 1, Temp	P6-4	E10	Flap Position Ind, Trailing Edge	P6-2	C12	Ground Service AC Ind, C phase	P6-4	A15
Alpha Vane Heater, Right	P18-3	D4	DAA 1, FMC	P18-2	C5	Electrical, Generator 1, AC Ind	P6-4	C12	Flap, Trailing Edge Drive, Alt (AC)	P6-2	D10	Ground Service, 26V A Phase	P6-4	D13
Altn T.E. Flap Drive (AC)	P6-2	D10	DAA 1, FMC (AC)	P18-2	D1	Electrical, Generator 2, AC Ind	P6-4	D12	Flight Control Shutoff Valve, Flt Cont	P6-2	A9	Ground Service, 28V B phase	P6-4	D14
Altimeter 1 (26V AC)	P18-2	B8	DAA 1, IRS (AC)	P18-2	D2	Electrical, Generator 2, Control	P6-4	E13	Flight Control Shutoff Valve, Spoiler	P6-2	A10	Ground Service, 28V C phase	P6-4	D15
Altimeter 2 (26V AC)	P6-1	B4	DAA 1, IRS (DC)	P18-2	D3	Electrical, Generator 2, Temp	P6-4	E12	Flight Control Shutoff Valve, Sby Rudder	P6-2	A11	Ground Service, External Power	P6-12	D8
Altimeter, Radio	P18-1	B5	DAA 2, FMC	P6-1	D13	Electrical, Generator Power Control	P6-5	B 5	Flight Recorder (AC)	P18-2	C 9			
Altimeter, Radio 2	P6-1	C15	DAA 2, FMC (AC)	P6-1	D8	Electrical, Gnd Svc AC Ind, A phase	P6-4	A13	Flight Recorder (DC, Bat)	P18-2	C10			
Altitude Alert Audio	P18-2	D6	DAA 2, IRS (AC)	P6-1	D9	Electrical, Gnd Svc AC Ind, B phase	P6-4	A14	Flush Motor, Lavatory, Forward, 3ph	P18-4	C6			
Anti-ice, Master Caution	P6-3	D9	DAA 2, IRS (DC)	P6-1	D10	Electrical, Gnd Svc AC Ind, C phase	P6-4	A15	Flush Motor, Lavatory, L Aft, 3 ph	P18-4	B6			
Anti-skid, Fail Warn & Park Brake	P6-3	E18	DC Bus 1	P6-4	B6	Electrical, Ground Service 28V A ph	P6-4	D13	Flush Motor, Lavatory, R Aft, 3 ph	P18-4	B3			
Anti-skid, Inboard	P6-3	E16	DC Bus Indication, Stby	P6-5	C1	Electrical, Ground Service 28V B ph	P6-4	D14	FMC, DAA 1	P18-2	C5			
Anti-skid, Outboard	P6-3	E17	DC Bus Indication, Bat	P6-5	C2	Electrical, Ground Service 28V C ph	P6-4	D15	FMC, DAA 1 (AC)	P18-2	D1			
APU Control	P6-5	B1	DC Bus Indication, Hot Bat	P6-5	C3	Electrical, Hot Bat Bus Indication	P6-5	C 3	FMC, DAA 2	P6-1	D13			
APU Control	P6-4	D11	DC Bus Indication, Bus No 1	P6-5	C4	Electrical, Int Lat	P6-5	A 5						

Hot Battery Bus	P18-5 B1	Light, Ceiling (Passenger), Left	P18-3 E 9	Light, Window (Passenger), Right	P18-3 B6	Ram Air Mod Cont	P6-4 E3	Transformer/Rectifier 3 Indication	P 6-5 C6
Hot Battery Bus Indication	P6-5 C3	Light, Ceiling (Passenger), Right	P18-3 E 8	Light, Wing Scan	P18-3 B13	Ram Air Mod Left	P6-4 E2	Transponder 1	P18-1 B3
Hydraulic Pressure Ind, A System	P6-2 D17	Light, Centr Console Pnl, (4)	Aft Console	Light, Work & Threshold	P18-3 B9	Ram Air Mod Right	P6-4 E1	Transponder 2	P6-1 D16
Hydraulic Pressure Ind, B System	P6-2 D16	Light, Center Instrument Panel (2)	CA Rud Adj	Lock, Door	P 6-3 C 1	Recirc Fan, Cabin	P6-4 D5	Trim Control, Aileron	P6-2 C9
Hydraulic Pump Depres Valve, Eng 1	P6-2 B17	Light, Circuit Breaker Panel	P6-3 C11	Mach Airspeed Indicator	P18-2 B10	Recirc Fan, Control	P6-4 B4	Trim Control, Rudder	P6-2 C10
Hydraulic Pump Depres Valve, Eng 2	P6-2 B16	Light, Compass, Standby	P6-3 A13	Mach Airspeed Indicator 2	P 6-1 C5	Recirc Fan, Energzd	P6-4 B5	Trim Indicator, Rudder	P6-2 C11
Hydraulic Pump, A System, Electric	P6-12 C 2	Light, Control Stand	P6-3 A10	Mach Trim, A System, AC	P18-1 E6	Recorder, Flight (AC)	P18-2 C9	Trim, Stabilizer	P18-0 A1
Hydraulic Pump, B System, Electric	P6-11 C 2	Light, Digital Dimming, Capt	P6-3 B10	Mach Trim, A System, DC	P18-1 E7	Recorder, Flight (DC, Bat)	P18-2 C10	Turbofan Valve, L	P6-4 C2
Hydraulic Pump, Standby (Normal)	P6-11 A 8	Light, Digital Dimming, F/O	P6-3 B 9	Mach Trim, B System, AC	P 6-2 B2	Recorder, Voice	P18-2 C6	Turbofan Valve, R	P6-4 C1
Hydraulic Pump, Standby, Alternate	P6-12 A 8	Light, Dome White	P6-3 A9	Mach Trim, B System, DC	P 6-2 B1	RMI 1	P18-1 B4	Vacuum Cleaner Receptacle, Aft	P18-4 C2
Hydraulic Quantity Ind, A System	P6-2 C17	Light, Electrical Rack	P18-3 E14	Mach Warn Sys 1	P18-2 B7	RMI 2	P6-1 B15	Vacuum Cleaner Receptacle, Fwd	P18-4 C1
Hydraulic Quantity Ind, B System	P6-2 C16	Light, Elec Panel	P 6-3 C9	Mach Warn Sys 2	P 6-1 C7	Rudder Trim Control	P6-2 C10	Valve Position Ind	P6-4 D3
Hydraulic Shutoff Valve, Engine 1	P6-2 B19	Light, Emer, F/O's, Oxy Panel (5)	FO Rud Adj	Main Distribution, Generator Bus 1	P 6-11 A2	Rudder Trim Indicator	P6-2 C11	Vertical Speed Indicator 1	P18-2 B6
Hydraulic Shutoff Valve, Engine 2	P6-2 B18	Light, Emergency Exit	P18-3 A12	Main Distribution, Generator Bus 2	P 6-12 A2	Seat Belt Sign	P18-3 A9	Vertical Speed Indicator 2	P6-1 C4
Idle Cont	P6-2 A4	Light, Entry Bright	P18-3 B 8	Marker Beacon	P18-1 A6	SELCAL 1	P18-2 D15	VHF 1, Comm	P18-2 D12
Ignition, Engine 1, Left	P6-2 B8	Light, Entry Dim	P6-5 B6	Master Caution, Air Conditioning	P6-3 D 8	SELCAL 2	P6-1 D1	VHF 2, Comm	P6-1 C 2
Ignition, Engine 1, Right	P6-2 B7	Light, FO Instrument Panel	FO Rud Adj	Master Caution, Annunciator Bus 1	P6-3 D11	Sensor Exc, AFCS System A (AC)	P18-1 E1	VHF 3, Comm	P18-2 D14
Ignition, Engine 2, Left	P6-2 B6	Light, Galley	P18-3 B10	Master Caution, Annunciator, Bat	P6-3 D12	Sensor Exc, AFCS System B (AC)	P6-2 C1	VHF Nav, G/S 1 (non EFIS)	P18-1 A2
Ignition, Engine 2, Right	P6-2 B5	Light, Galley, Aft Work	P6-3 B13	Master Caution, Anti-ice	P6-3 D9	Service Outlets (115V AC)	P6-3 E1	VHF Nav, G/S 2 (non EFIS)	P6-1 A16
Instrument Comparator 2 (Mon)	P6-1 A9	Light, Ind Master Dim, Bat	P6-3 B13	Master Caution, Engines	P6-2 A5	Service Outlets (26V AC)	P6-3 F1	VHF Nav-1, VOR/ILS (EFIS)	P18-1 A1
Instrument Comparator 2 (Pwr)	P6-1 A10	Light, Ind Master Dim, DC 1	P6-3 B14	Master Caution, Fuel	P6-3 D10	Slat, Auto 1 (AC)	P6-2 B14	VHF Nav-2, VOR/ILS (EFIS)	P6-1 A15
Instrument XFR (Transfer)	P18-2 A2	Light, Ind Master Dim, DC 2	P6-3 B15	Master Warn & Cont	P6-2 B23	Slat, Auto 1 (DC)	P6-2 B15	VHF Nav, VOR/LOC 1	P18-1 A1
Instrument XFMR-1 (Transformer 1)	P18-2 A1	Light, Ind, Master Dim, Dim / Test	P6-3 C12	MCP, AFCS, DC	P18-1 D1	Slat, Auto 2 (AC)	P6-2 C14	VHF Nav, VOR/LOC 2	P 6-1 A15
Inst Transformer 2	P6-1 A12	Light, Indcator Master Dim, Sect 1	P6-3 C13	Mode Annunciator, FMCS	P18-2 E7	Slat, Auto 2 (DC)	P6-2 C15	Vibration Monitor, Engine	P 6-2 B4
Interphone Power, Capt & Observer	P6-2 B21	Light, Ind Master Dim, Sect 2	P6-3 C14	Music Tape RPDR (AC)	P6-1 E6	Smoke Detector, Lav	P18-4 A1	Vibrator, Standby Alt/AS Indicator	P18-2 B9
Interphone Power, Capt (2 Bus)	P6-2 A21	Light, Ind Master Dim, Sect 3	P6-3 C15	Music Tape RPDR (DC)	P6-1 E5	Speed Brake, Auto	P6-2 B9	Voice Recorder	P18-2 C6 D7
Interphone Power, Capt (Bat)	P6-2 A20	Light, Ind Master Dim, Sect 4	P6-3 D13	N1 Tach Indicator, Engine 1 N1	P6-2 D3	Spoiler Shutoff Valve	P6-2 A11	VOR/LOC 1	P18-1 A1
Interphone Power, F/O & Equip Rack	P6-2 B20	Light, Ind Master Dim, Sect 5	P6-3 D14	N1 Tach Indicator, Engine 2	P6-2 D1	Stabilizer Trim	P18-0 1	VOR/LOC 2	P6-1 A15
Interphone Power, F/O (2 Bus)	P6-2 D21	Light, Ind Master Dim, Sect 6	P6-3 D15	N2 Tach Indicator, Engine 1	P6-2 D4	Stab Trim Actuator	P6-2 B11	VSI 1	P18-2 B6
Interphone Power, F/O (Bat)	P6-2 D20	Light, Landing, Inboard Left	P18-3 A16	N2 Tach Indicator, Engine 2	P6-2 D2	Stab Trim Control	P6-2 B13	VSI 2	P6-1 C4
Interphone Power, Flt Int Amp	P6-2 C21	Light, Landing, Inboard Right	P18-3 A15	No Smoking	P18-3 A10	Stall Warn 2 (AC)	P6-1 A6	Warning, Altitude Alert Audio	P18-2 D6
Interphone Power, Service Interph	P6-2 C20	Light, Landing, Outboard Left	P18-3 A14	Oil Quantity Ind, A System Hyd	P6-2 C17	Stall Warn 2 (DC)	P6-1 A7	Warning, Anti-skid Fail	P6-3 E18
Inverter Control	P6-5 A1	Light, Landing, Outboard Right	P18-3 A13	Oil Quantity Ind, B System Hyd	P6-2 C16	Stall Warn (AC)	P18-2 D8	Warning, Door	P6-3 A2
Inverter Power	P6-5 A2	Light, Lavatory Dome	P18-3 F10	Oil Quantity, Engine 1	P6-2 D7	Stall Warn (DC)	P18-2 D9	Warning, Ground Proximity	P18-1 A7
Inverter Volts Indication	P6-5 D5	Light, Lavatory Mirror, Aft	P18-3 F11	Oil Quantity, Engine 2	P6-2 D5	Stall Warn, Asym Mode	P18-2 D7	Warning, Land Gear, Aural	P6-3 D18
IRS 1 (AC)	P18-2 D4	Light, Lavatory Mirror, Forward	P6-3 D1	Oil Temp & Pressure, Engine 1 (AC)	P6-2 D8	Start Valve Eng 1	P6-2 A8	Warning, Land Gear, Latch & Pres	P6-3 C17
IRS 1 (DC)	P18-2 D5	Light, Logo, Left	P18-3 C14	Oil Temp & Pressure, Engine 2 (AC)	P6-2 D6	Start Valve Eng 2	P6-2 A7	Warning, Light, AFCS Sys A (Bat)	P18-1 E5
IRS 2 (AC)	P6-1 D11	Light, Logo, Right	P18-3 C13	Oven #1 & #2, Forward Galley	P6-2 D6	Stby Altimeter / ASI Vib	P18-2 B9	Warning, Light, AFCS Sys B (Bat)	P6-2 C4
IRS 2 (DC)	P6-1 D12	Light, Map & Kit	P6-3 A14	Oven #1, #2 & #3, Aft Galley	Fwd Galley	Stby Bus	P6-4 F17	Warning, Mach 1	P18-2 B7
IRS (AC), DAA 2	P6-1 D9	Light, Mode Control Panel	CA Rud Adj	Overheat, Wheel Well, Wing-Body	P6-2 B24	Stby Bus, Indication	P6-5 D1	Warning, Mach 2	P6-1 C7
IVSI / RA #1	P18-2 B6	Light, Observer Reading	P6-3 A15	Oxygen, Indicator	P18-3 F6	Stby Bus, Power	P6-4 F16	Warning, Stall (AC)	P18-2 D8
Landing Gear, Air/Gnd Relay & Lts	P6-3 C18	Light, Overhead, 28V Primary	P6-3 E9	Oxygen, Manual Control	P18-3 F7	Stby Horizon	P18-2 C1	Warning, Stall, Assymetry Mode	P18-2 D7
Landing Gear, Anti-skid, Inboard	P6-3 E16	Light, Overhead, 28V Sec	P6-3 E11	Oxygen, Passenger, Left	P18-3 F9	Stby Hydraulic Pump, Alternate	P6-12 A8	Water Heater, Lavatory, Forward	P18-4 A6
Landing Gear, Anti-skid, Outboard	P6-3 E17	Light, Overhead, 5V Sec	P6-3 F9	Oxygen, Passenger, Right	P18-3 F8	Stby Hydraulic Pump, Normal	P6-11 A8	Water Heater, Lavatory, L Aft	P18-4 A7
Landing Gear, Aural Warn	P6-3 D18	Light, Overhead, 5V Sec	P6-3 F10	PA Amp, Bat	P6-1 D5	Stby Hydraulic Pump, Standby	P6-2 A12	Water Heater, Lavatory, R Aft	P18-4 A5
Landing Gear, Latch & Press Warning	P6-3 C17	Light, Overhead, 5V Sec	P6-3 F11	Pack Valve, Left	P6-4 C4	Stby Rudder Shutoff Valve	P6-5 A6	Water Quantity Indicator	P18-4 A2
Landing Gear, Nose Air/Gnd	P6-3 D17	Light, Overhead, 5V Sec	P6-3 F12	Pack Valve, Right	P6-4 C3	Standby Power, Auto Control	P6-5 A6	Weather Radar, Indicator	P6-1 D14
Landing Gear, Nose Steering	P6-3 D16	Light, Overhead, 5V Sec	P6-3 F13	Passenger & Crew Call	P18-4 A1	Switched Hot Battery Bus	P18-5	Weather Radar, R/T	P6-1 D15
Landing Gear PTU Bypass Valve Ctl 1	P6-2 D18	Light, Overhead, 5V Sec	P6-3 F14	Passenger Address Amplifier, Bat	P6-1 D5	Tach Indicator, Engine 1 N1	P6-2 D3	Wheel Well Overheat, Fire Detection	P6-2 B24
Landing Gear PTU Bypass Valve Ctl 2	P6-2 D19	Light, Panel & Instr, 28V Prim, Capt	P6-3 B12	Pitot Static Indication, Capt	P6-3 F18	Tach Indicator, Engine 1 N2	P6-2 D4	Window Anti Ice, Left Front	P6-11 B9
Landing Gear Xfer Valve, Primary	P6-2 D14	Light, Panel & Instr, 28V Prim, F/O	P6-3 B11	Pitot Static Indication, F/O	P6-3 F17	Tach Indicator, Engine 2 N1	P6-2 D1	Window Anti Ice, Left Side	P6-12 B9
Landing Gear Xfer Valve, Secondary	P6-2 D15	Light, Panel & Inst, CB Panel	P6-3 C11	Pitot Static Indication, Heater, Capt Lower R	P18-3 C2	Tach Indicator, Engine 2 N2	P18-2 A7	Window Anti Ice, L4 & L5	P6-11 B7
Lavatory Flush Motor, Forward, 3 ph	P18-4 C6	Light, Panel & Inst, Elex Panel	P6-3 C9	Pitot Static, Heater, Capt Upper L	P18-3 C1	TAT Indicator	P18-2 B7	Window Anti Ice, Right Front	P6-12 B8
Lavatory Flush Motor, L Aft, 3 ph	P18-4 B6	Light, Position Steady (Nav)	P18-3 B16	Pitot Static, Heater, F/O Lower L	P18-3 C4	TCAS	P18-0 A2	Window Anti Ice, Right Side	P6-11 B8
Lavatory Flush Motor, R Aft, 3 ph	P18-4 B3	Light, Position Strobe	P18-3 B14	Pitot Static, Heater, F/O Upper R	P18-3 C3	Temp Control, 35° F Left	P6-4 A2	Window Anti Ice, R4 & R5	P6-12 B7
Lavatory Mirror / Ext Pwr	P6-3 D1	Light, Reading Strn, Left	P18-3 D6	Position Sensor (inop)	P18-2 C8	Temp Control, 35° F Right	P6-4 A1	Window Heat, Cont, Left Front (AC)	P18-3 F1
Lavatory Smoke Det	P18-4 A1	Light, Reading Strn, Left	P18-3 D7	Potable Water Quantity Indicator	P18-4 A2	Temp Control, Auto Left	P6-4 A4	Window Heat, Cont, Left Front (DC)	P18-3 F2
Lavatory Water Heater, Forward	P18-4 A6	Light, Reading Strn, Left	P18-3 D8	Pressurization Control, Auto (AC)	P6-4 F1	Temp Control, Auto Right	P6-4 A3	Window Heat, Cont, Left Side (AC)	P18-3 F3
Lavatory Water Heater, L Aft	P18-4 A7	Light, Reading Strn, Left	P18-3 D9	Pressurization Control, Auto (DC)	P6-4 F2	Temp Control, Manual	P6-4 A5	Window Heat, Cont, Left Side (DC)	P18-3 D2
Lavatory Water Heater, R Aft	P18-4 A5	Light, Reading Strn, Left	P18-3 D10	Pressurization Control, Manual (AC)	P6-4 F5	Temperature Ind	P6-4 D2	Window Heat, Cont, Right Front (AC)	P18-3 E1
Leading Edge Flap Position Ind	P6-2 C12	Light, Reading Strn, Left	P18-3 D11	Pressurization Control, Manual (DC)	P6-4 F6	Temp Probe (Rosemount)	P18-3 C5	Window Heat, Cont, Right Front (DC)	P18-3 E2
Light, Access Compartment	P18-3 F14	Light, Reading Strn, Left	P18-3 D12	Pressurization Control, Stby (AC)	P6-4 F3	Thrust Reverser Control, Engine 1	P6-2 C8	Window Heat, Cont, Right Side (AC)	P18-3 E3
Light, AFDS Flood	P6-3 E14	Light, Reading Strn, Right 340 -464	P18-3 C6	Pressurization Control, Stby (DC)	P6-4 F4	Thrust Reverser Cont, Engine 2	P6-2 C7	Window Heat, Cont, Right Side (DC)	P18-3 E2
Light, Air Conditioning Compartment	P18-3 F13	Light, Reading Strn, Right 464 -500D	P18-3 C7	Pressurization Control, Auto (AC)	P6-4 F1	Thrust Reverser Ind, Engine 1	P6-2 C6	Windshield Wiper, Left	P18-3 B2
Light, Anti-collision (Beacon), Bot	P18-3 C16	Light, Reading Strn, Right 500D-608	P18-3 C8	Pressurization, Isolation Valve	P6-4 B1	Thrust Reverser Ind, Engine 2	P6-2 C5	Windshield Wiper, Right	P18-3 B1
Light, Anti-collision (Beacon), Top	P18-3 C15	Light, Reading Strn, Right 608 -720	P18-3 C9	Pressurization, Outflow Valve, Fwd	P6-4 C5	Total Air Temperature Indicator	P18-2 A 7	Wing Anti-ice Valve	P18-3 A5
Light, Background	P6-3 A12	Light, Reading Strn, Right 720 -727E	P18-3 C10	Pressurization, Outflow Valve, Htr	P6-4 D5	Trailing Edge Flap Drive, Alt (AC)	P6-2 D10	Wing-Body Overheat, Fire Detection	P6-2 B24
Light, Background, Standby	P6-3 A11	Light, Reading Strn, Right 727E-844	P18-3 C11	Pressurization, Overheat	P6-4 D4	Trailing Edge Flap Position Ind	P6-2 C13	Work Light, Forward Galley	Fwd Galley
Light, Capt Instrument Panel (3)	CA Rud Adj	Light, Reading Strn, Right 844 -945	P18-3 C12	Pressurization, Pressure Indicator	P18-2 C10	Transfer Bus 1, Alternate	P6-12 B2	Yaw Damper (AC)	P18-1 D5
Light, Cargo Compartment, Aft	P18-3 E15	Light, Runway Turnoff, Left	P18-3 D16	Printer	P6-4 E10	Transfer Bus 1, Normal	P6-11 B2	Yaw Damper (DC)	P18-1 D6
Light, Cargo Compartment, Forward	P18-3 E16	Light, Runway Turnoff, Right	P18-3 D15	Radar, Weather Indicator	P6-1 D14	Transfer Bus 2, Alternate	P6-11 B5		
Light, Ceiling (Pass) Cont, Brt L	P18-3 E 6	Light, Seat Belt	P18-3 A9	Radar, Weather R/T	P6-1 D15	Transfer Bus 2, Normal	P6-12 B5		
Light, Ceiling (Pass) Cont, Brt R	P18-3 F12	Light, Sign Control (Passenger)	P18-3 A11	Radio Altm 1	P18-1 B6	Transfer Bus Indictm	P6-5 D6		
Light, Ceiling (Pass) Cont, Night	P18-3 E 7	Light, Standby Power Ind	P6-5 A5	Radio Altm 2	P6-1 C15	Transformer, Inst 1	P18-2 A1		
Light, Ceiling (Pass), Gnd Svc Brt	P18-3 E11	Light, Taxi	P18-3 D14	Rain Repellent, Left	P18-3 B4	Transformer, Inst 2	P6-1 A12		
Light, Ceiling (Pass), Gnd Svc Nite	P18-3 E12	Light, Test & Dim	P6-3 C12	Rain Repellent, Right	P18-3 B3	TR Unit 1	P6-4 A 8		
Light, Ceiling (Pass), Gnd Svc R	P18-3 E10	Light, Wheel Wells	P18-3 F15	Rain, Windshield Wiper, Left	P18-3 B2	TR Unit 2	P6-4 C 8		
		Light, Window (Passenger), Left	P18-3 B7	Rain, Windshield Wiper, Right	P18-3 B1	TRUnit 3	P6-4 E 8		